

# **VULCAN**

## CATALOG OF REPLACEMENT PARTS

### **ERD/ERC SERIES ELECTRIC FRYERS**

<b>ERD40</b>	<b>ML-114614</b>
<b>ERD50</b>	<b>ML-114615</b>
<b>ERD225</b>	<b>ML-114616</b>
<b>ERD85</b>	<b>ML-114617</b>

<b>ERC40</b>	<b>ML-114618</b>
<b>ERC50</b>	<b>ML-114619</b>
<b>ERC225</b>	<b>ML-114620</b>
<b>ERC85</b>	<b>ML-114621</b>

#### **MODELS MANUFACTURED AUGUST 2003 TO OCTOBER 2005 WITH TDI CONTROLLERS**

<b>ERD50</b>	<b>ML-135541</b>
<b>ERD85</b>	<b>ML-135543</b>

<b>ERC50</b>	<b>ML-135545</b>
<b>ERC85</b>	<b>ML-135547</b>


#### **MODELS MANUFACTURED AFTER OCTOBER 2005 WITH TDI CONTROLLERS**

<b>ER50D</b>	<b>ML-136496</b>
<b>ER85D</b>	<b>ML-136497</b>

<b>ER50C</b>	<b>ML-136498</b>
<b>ER85C</b>	<b>ML-136499</b>




For additional information on Vulcan-Hart or to locate an authorized parts and service provider in your area, visit our website at [www.vulcanhart.com](http://www.vulcanhart.com)

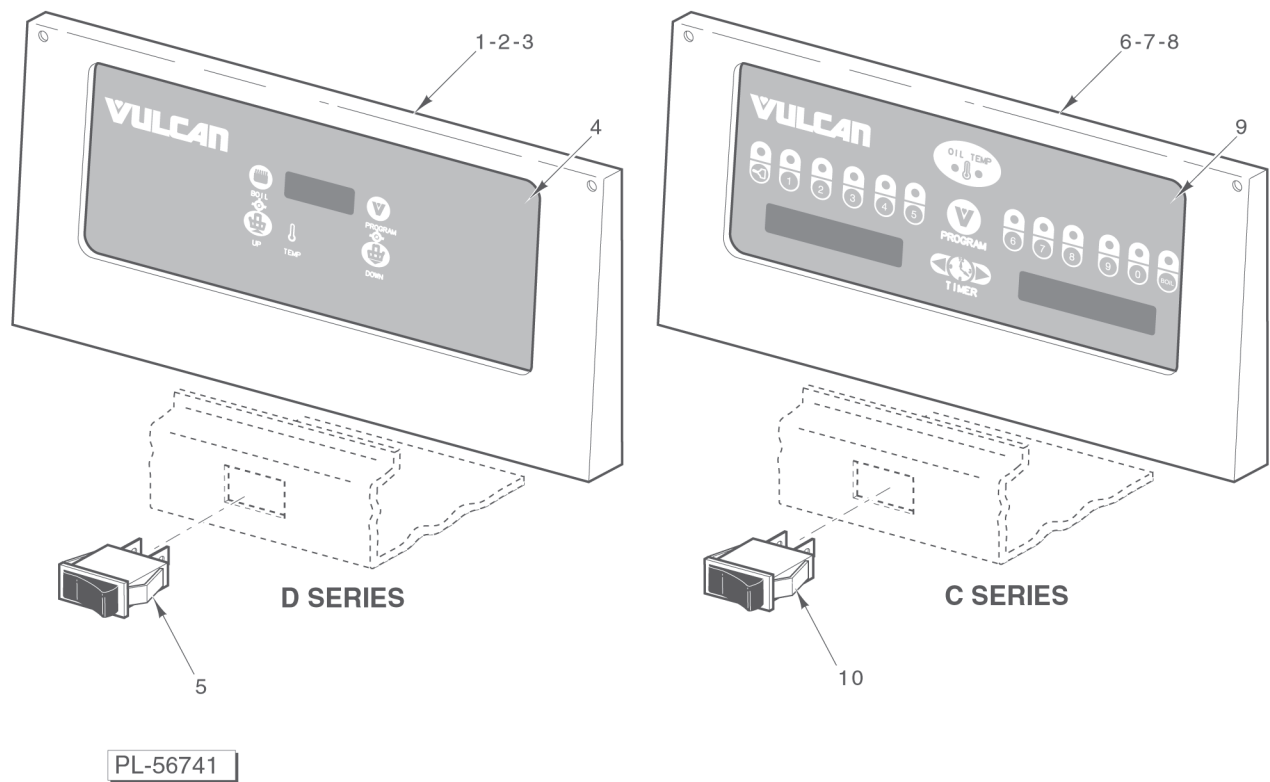



**CONTROL PANEL\* (TRIDELTA)  
(CURRENT CONSTRUCTION)**

ILLUS.	PART NO.	NAME OF PART	AMT.
PL-56741			
1	00-427757-00001	Control Assy. – Solid State .....	1
2	00-426815-000G1	Plate Assy. – Mounting (ERD40/50) .....	1
3	00-426815-000G2	Plate Assy. – Mounting (ERD85) .....	1
4	00-497421-00001	Overlay – Control Panel .....	1
5	00-427755-000G1	Rocker Switch Assy. ....	1
6	00-427758-00001	Computer Cooking Assy. ....	1
7	00-426815-000G1	Plate Assy. – Mounting (ERC40/50) .....	1
8	00-426815-000G2	Plate Assy. – Mounting (ERC85) .....	1
9	00-497422-00001	Overlay – Control Panel .....	1
10	00-427755-000G1	Rocker Switch Assy. ....	1
	00-426251-00002	Plug .....	1

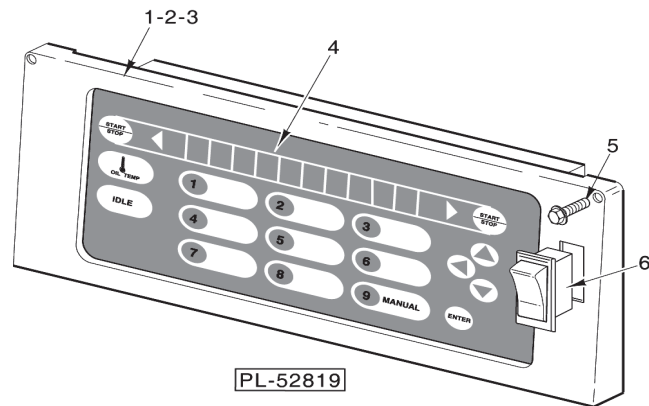

**CONTROL PANEL (PRIOR TO OCTOBER 1, 2003)  
(ERC SERIES)**

ILLUS.	PART NO.	NAME OF PART	AMT.
PL-52819			
1	00-419385-000G1	Control Panel Frame (ERC40/50) .....	1
2	00-419386-000G1	Control Panel Frame (ERC85) .....	1
3	00-419385-000G2	Control Panel Frame (ERC225) .....	1
4	00-419557-00007	Board & Panel Assy. (May 15, 2000 Thru September 30, 2003) .....	1
5	NS-046-89	Nut Assy. 6-32 Hex KEPS .....	6
6	00-411496-000B1	Switch – Rocker .....	1
	00-419557	Computer Controlled (April 15, 1996 to May 15, 2000) .....	1

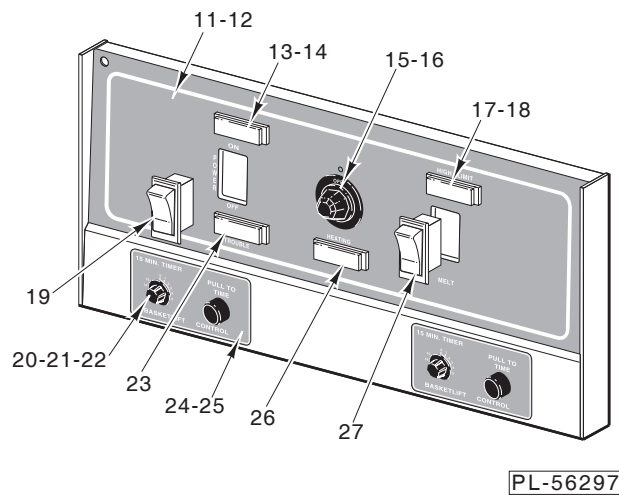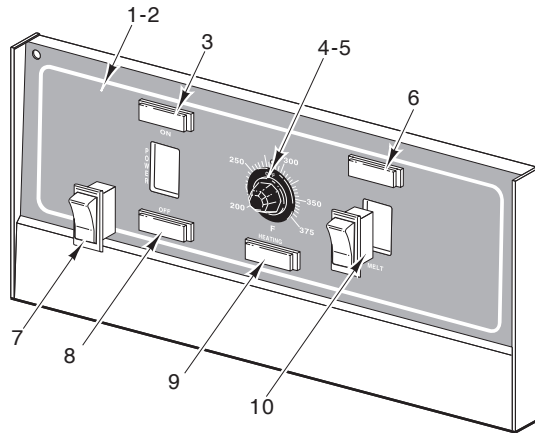

PL-56297

## CONTROL PANEL (ERD SERIES)

# **CONTROL PANEL (ERD SERIES)**

ILLUS. PL-56297	PART NO.	NAME OF PART	AMT.
1	00-418387-00002	Overlay – Control Panel (ERD40/50) .....	1
2	00-418388-00002	Overlay – Control Panel (ERD85) .....	1
3	00-411496-000E4	Light – Hot Top .....	1
4	00-414254-00001	Knob – Thermostat .....	1
5	00-415638-000G1	Potentiometer .....	1
6	00-411496-000E7	Light – Indicator (Red) .....	1
7	00-411496-000B7	Switch – Rocker .....	1
8	00-411496-000E6	Light – Indicator (Trouble) .....	1
9	00-411496-000E3	Light – Indicator (Amber) .....	1
10	00-411496-000B7	Switch – Rocker .....	1
11	00-418387-00002	Overlay – Control Panel (ERD40/50) .....	1
12	00-418388-00002	Overlay – Control Panel (ERD85) .....	1
13	00-411496-000E3	Light – Indicator (Amber) .....	1
14	00-411496-000E7	Light – Indicator (Red) .....	1
15	00-414254-00001	Knob – Thermostat .....	1
16	00-415638-000G1	Potentiometer .....	1
17	00-411496-000E7	Light – Indicator (Red) .....	1
18	00-411496-000E4	Light – Hot Top .....	1
19	00-411496-000B1	Switch – Rocker .....	1
20	00-415254-00002	Timer – Basketlift (Solid State) .....	AR
21	00-415254-00003	Timer (7 Min.) .....	1
22	00-415269-00001	Knob – Basketlift Timer .....	1
23	00-411496-000E6	Light – Indicator (Trouble) .....	1
24	00-415255-00005	Overlay – Basketlift (7.5 Min.) .....	AR
25	00-415255-00004	Label – Basketlift (15 Min.) .....	AR
26	00-411496-000E3	Light – Indicator (Amber) .....	1
27	00-411496-000B1	Switch – Rocker .....	1
	00-415144-00012	Board – Temperature .....	1

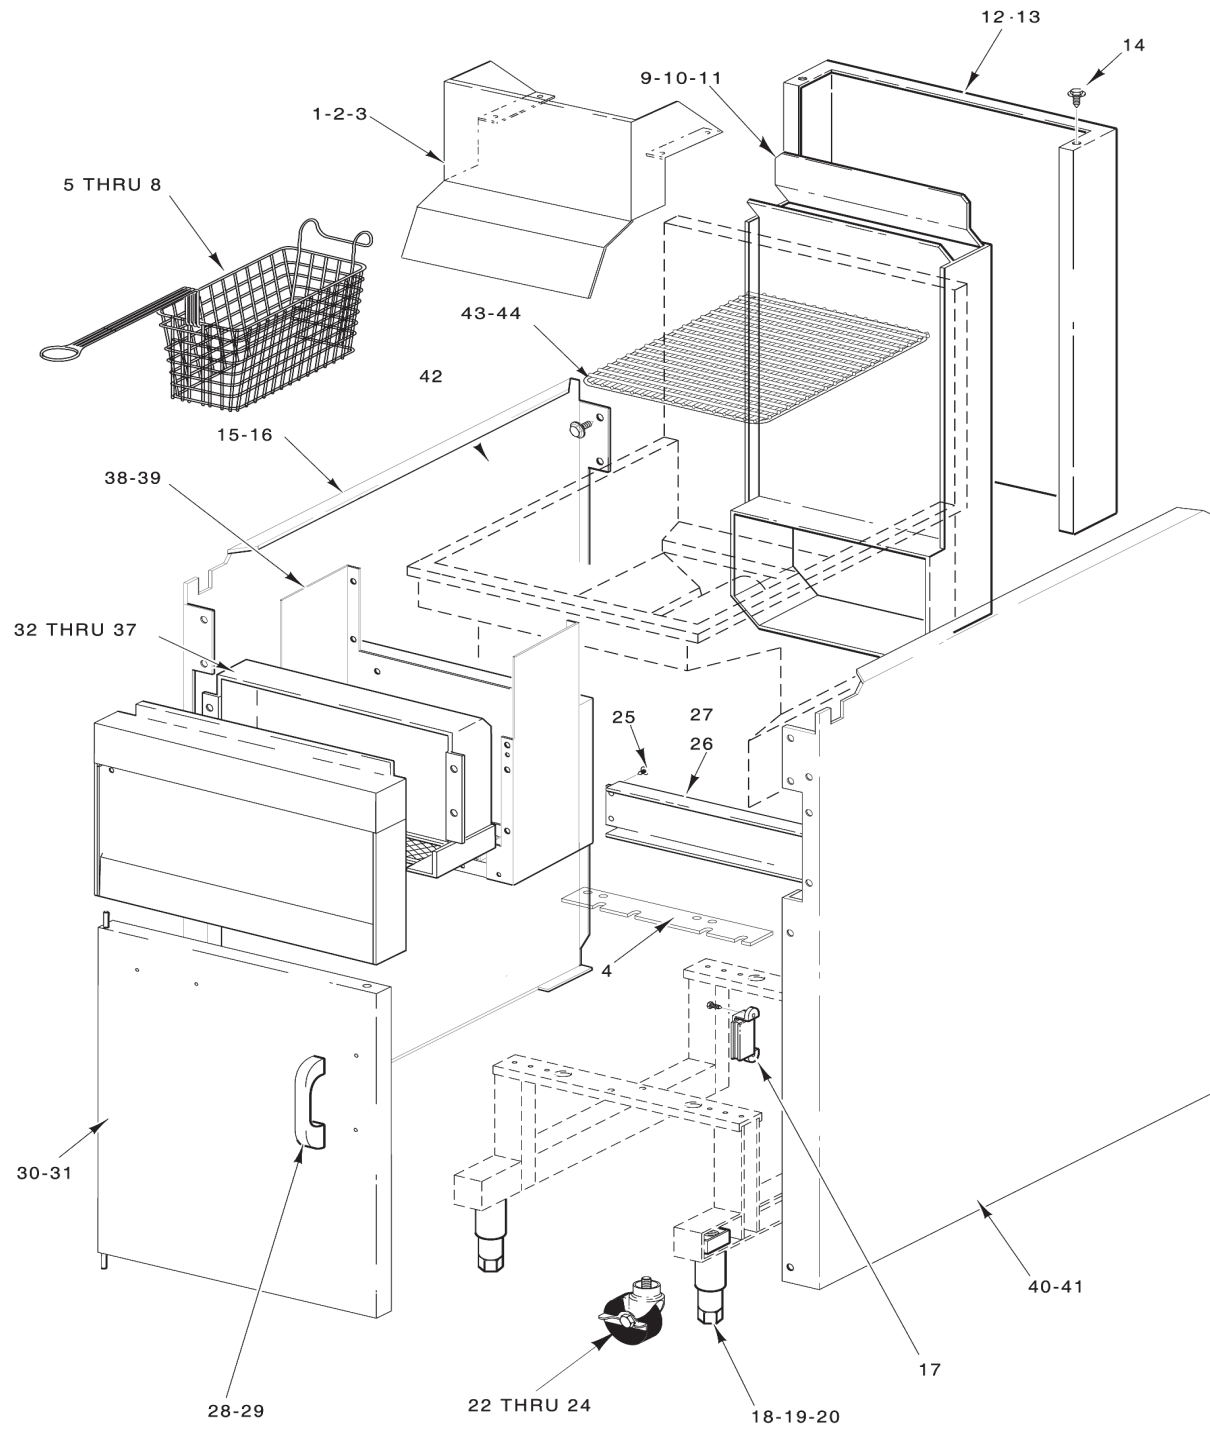


Figure 1

## BODY UNIT

## BODY UNIT

ILLUS. Figure 1	PART NO.	NAME OF PART	AMT.
1	00-421831-00001	Hanger – Basket (ERC85/ERD85) .....	1
2	00-421912-000G1	Hanger – Basket (ERC85/ERD85) .....	1
3	00-421911-000G1	Hanger – Basket (ERC40/50/ERD40/50) .....	1
4	00-421897-00001	Bracket – Power Supply Mounting .....	1
5	00-422868-00002	Basket – Twin (ERC85/ERD85) .....	AR
6	00-422870-00002	Basket – Triple (ERC85/ERD85) .....	AR
7	00-422869-00001	Basket – Single (ERC85/ERD85) .....	AR
8	00-411378-00002	Basket – Single (ERC40/50/ERD40/50) .....	AR
9	00-416994-000G2	Flue Assy. (3 Tube) .....	1
10	00-418201-000G1	Flue Box Assy. (4 Tube) .....	1
11	00-418205-000G1	Flue Assy. (5 Tube) .....	1
12	00-422020-000G4	Flue Wrap (SST) (ERC85/ERD85) .....	1
13	00-422021-00002	Wrap – Flue (SST) (ERC40/50/ERD40/50) .....	1
14	SD-036-96	Self-Tapping Screw 8-18 x 3/4 Hex Hd., Type AB .....	2
15	00-420596-00004	Body – Side (SST) (RH) (40/50) .....	1
16	00-419777-00004	Body – Side (SST) (RH) .....	1
17	00-497296-000G1	Magnet .....	2
18	00-413112-00007	Leg (6 1/4 In.) (SST) .....	4
19	00-413112-00009	Legs (6 In.) (SST) .....	4
20	00-413112-00010	Base Plate – Leg .....	4
21	00-418906-00001	Caster – Adjustable Rigid .....	2
22	00-418907-00001	Caster – Adjustable Swivel .....	2
23	00-421893-00002	Caster W/O Brake (4 In.) (Plate Mounted) .....	2
24	00-421893-00001	Caster – Swivel W/Brake (4 In. Dia.) (Plate Mounted) .....	2
25	SD-032-07	Self-Tapping Screw 10-24 x 1/2 Hex Washer Hd., Type TT .....	10
26	00-417014-00001	Bracket – Rear Support (ERC40/50/ERD40/50) .....	1
27	00-418320-00001	Bracket – Rear Support (ERC85/ERD85) .....	1
28	00-419653	Handle .....	1
29	RS-033-02	Pop Rivet (0.187) .....	4
30	00-426562-000G8	Door Assy. (SST) (15 1/2 In.) (ER50D/ER50C) .....	1
31	00-426562-000G7	Door Assy. (SS) (21 In.) (ER85D/ER85C) .....	1
32	00-416535-00004	Relay S.P.D.T. 24 V. Coil (Located on rear of panel) .....	1
33	00-415144-00012	Board – Temperature (ERD Series) .....	1
34	00-422737-00001	Probe – Thermistor (ERC85) (ERD85/ER85D w/TDI Controls) .....	1
35	00-422737-00002	Probe – Thermistor (ERC40/50/225) (ERD40/50, ER50D w/TDI Controls) .....	1
36	00-414142-00002	Probe – Thermistor (ERD 85) (Prior to October 5, 2003) .....	1
37	00-414142-00001	Probe – Thermistor (ERD 40, 50, 225) (Prior to October 5, 2003) .....	AR
38	00-422838-000G1	Heat Shield (ERC40/50/ERD40/50) .....	1
39	00-422838-000G2	Heat Shield (ERC85/ERD85) .....	1
40	00-420596-00003	Body – Side (SST) (LH) (40, 50) .....	1
41	00-419777-00003	Body – Side (SST) (LH) .....	1
42	SD-036-03	Self-Tapping Screw 8-18 x 3/8 Hex Washer Hd., Type AB .....	8
43	00-420613-00002	Screen – Drain (13 1/2 In.) .....	1
44	00-420613-00001	Screen – Drain (19 In.) .....	1
	00-420769-00001	Bumper – Rubber .....	1
	00-422378-00001	Rack – Basket (85) .....	1
	00-428023-000G2	Door Hinge Assy. ....	1
	00-426562-000G2	Door Assy. (ERD225/40/50, ERC225/40/50) .....	1
	NS-047-79	Palnut 3/16 .....	2
	00-417700-00003	Nameplate 4 In. (Old Style) .....	1

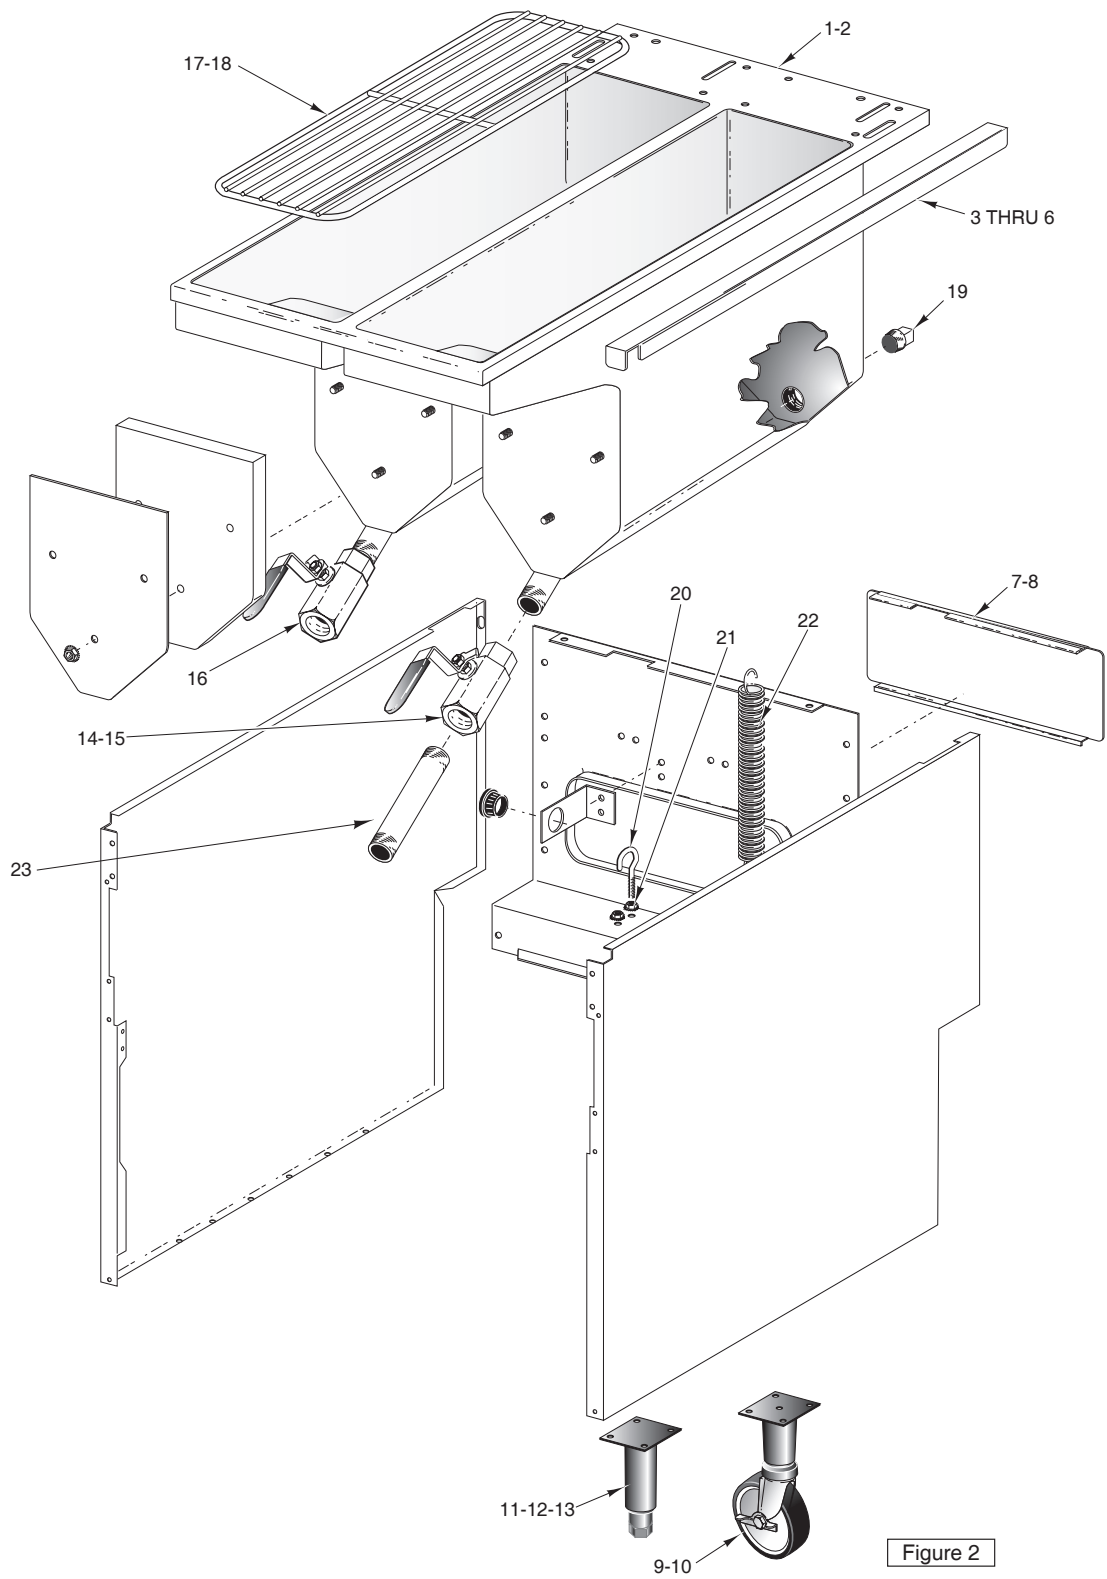



Figure 2

**TANK ASSEMBLY**



## TANK ASSEMBLY


ILLUS. Figure 2	PART NO.	NAME OF PART	AMT.
1	00-421844-000G1	Tank Assy. (ER50) .....	1
2	00-421842-000G1	Tank Assy. (ER85) .....	1
3	00-414460-00001	Strip – Grease Protector (ERC40/50/ERD40/50) .....	1
4	00-414460-00002	Strip – Grease Protector (Spec) (ERC85/ERD85) .....	1
5	00-414460-00003	Strip – Grease Protector (Spec) .....	1
6	00-414460-00004	Strip – Grease Protector (Spec) .....	1
7	00-414345-00001	Door – Rear .....	1
8	00-414345-00003	Door – Rear (PTD) .....	1
9	00-421893-00002	Caster W/O Brake (4 In.) .....	2
10	00-421893-00001	Caster – Swivel W/Brake (4 In.) .....	2
11	00-413112-00007	Leg (6 <sup>1</sup> / <sub>4</sub> In.) (SST) .....	4
12	00-413112-00009	Legs (6 In.) (SST) .....	4
13	00-413112-00010	Base Plate – Leg .....	4
14	00-414212-00003	Valve – Ball (RH) (ERC225/ERD225) .....	1
15	00-414212-00004	Valve – Ball (LH) (ERC40/50/ERD40/50) .....	1
	00-426803-000G3	Valve Assy. w/Mounted Switch (ER50) (w/TDI Controller) .....	1
16	00-414212-00006	Valve – Ball 1 <sup>1</sup> / <sub>4</sub> Bal (ERC85/ERD85) .....	1
	00-426803-000G2	Valve Assy. w/Mounted Switch (ER85) (w/TDI Controller) .....	1
17	00-414214-00001	Wire Rack (ERC225/ERD225) .....	2
18	00-414214-00002	Wire Rack (ERC40/50/ERD40/50) .....	1
19	FP-028-14	Plug – Pipe 1/2 Sq. Hd. ....	AR
20	00-402570-00003	Eye Bolt .....	AR
21	NS-046-50	Mach. Nut 6-32 Hex Stl. ....	AR
22	00-406363-00001	Spring – Door (Long) .....	AR
23	FP-090-66	Drain Pipe (ER50D/ER50C) .....	1
	FP-090-67	Drain Pipe (ER85D/ER85C) .....	1
	00-426805-000G1	Reed Switch (Wired) (ER50/85) (w/TDI Controller) .....	1
	00-426801-00002	Magnet – Reed Switch (ER50/85) (w/TDI Controller) .....	1
	00-421822-000G1	Tank Assy. (ER40) .....	1
	00-422110-000G1	Tank Assy. (ER225) .....	1

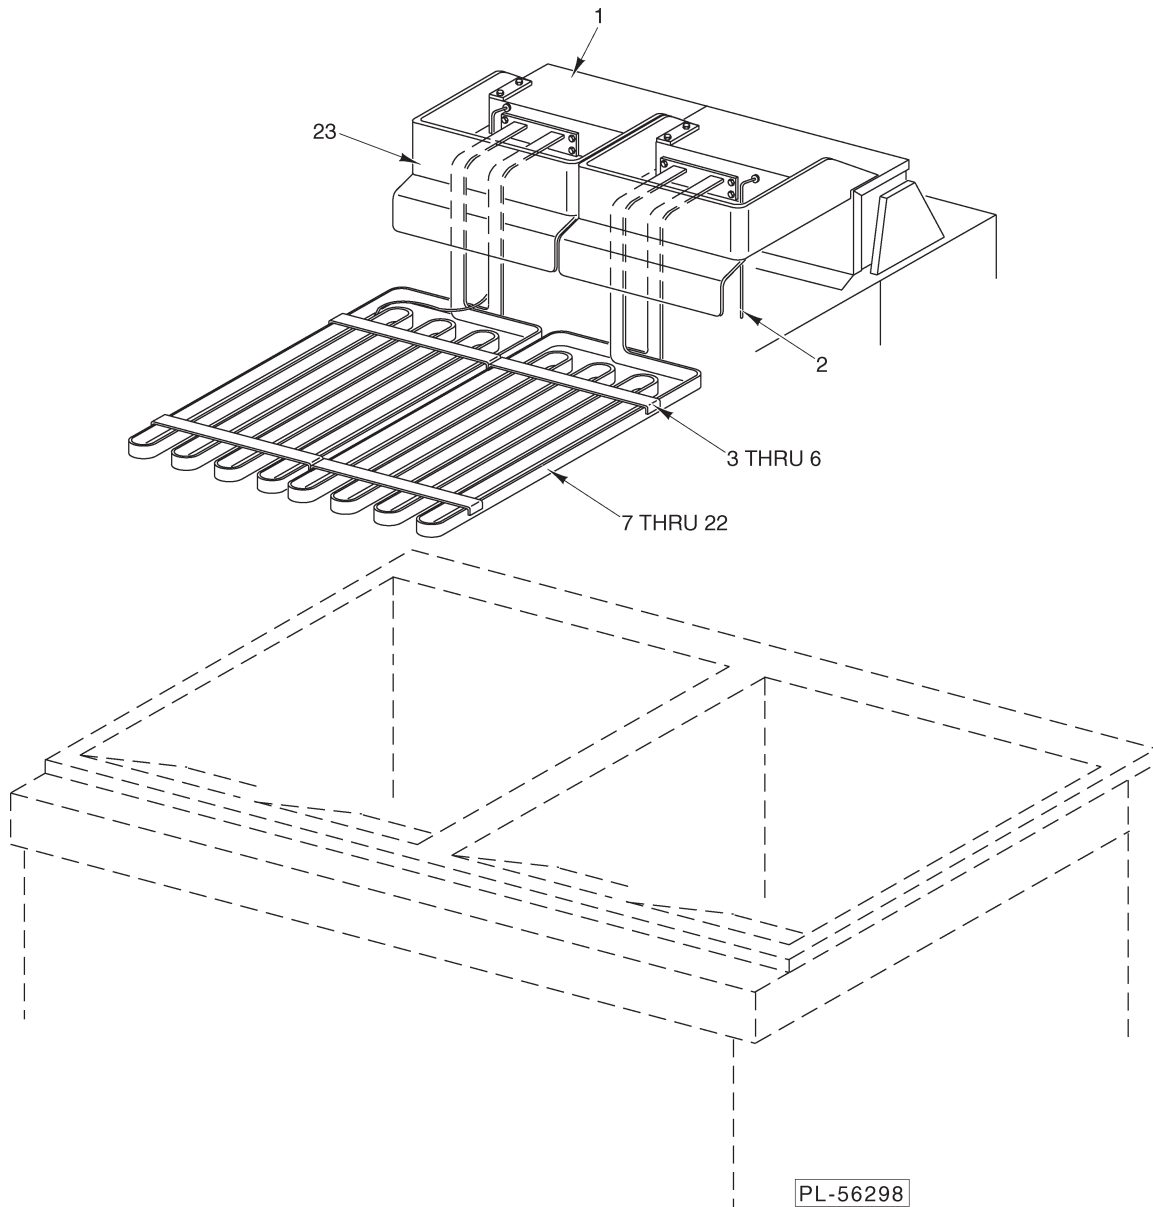

### HEATING ELEMENT ASSEMBLY

## HEATING ELEMENT ASSEMBLY


ILLUS.	PART NO.	NAME OF PART	AMT.
PL-52898			
1	00-422321-000G1	Element Head Assy. (ERC225/ERD225) (Prior to December 2003) .....	1
	00-422827-000G2	Element Head Assy. (LH) (ER225) .....	1
	00-422827-000G3	Element Head Assy. (RH) (ER225) .....	1
	00-422827-000G1	Element Head Assy. (ER40/50) .....	1
	00-422825-000G1	Element Head Assy. (ER85) .....	1
2	00-416782-00001	Bracket – Hi-Limit .....	AR
3	00-422727-00002	Clamp – Element Bottom (ERC50/ERD50) .....	2
4	00-422380-00001	Clamp – Lower (ERC85/ERD85) .....	1
5	00-422381-000G1	Clamp – Top Element Assy. (ERC85/ERD85) .....	4
6	00-421916-000G1	Top Clamp Assy. (ERC50/ERD50) .....	4
7	00-416741-000G5	Element Assy. (208 V., 7000 kW) (ER40/50) .....	2
8	00-416741-000G6	Element Assy. (220 V., 7000 kW) (ER40/50) .....	2
9	00-416741-000G7	Element Assy. (240 V., 7000 kW) (ER40/50) .....	2
10	00-416741-000G8	Element Assy. (480 V., 7000 kW) (ER225) .....	2
11	00-416741-000G9	Element Assy. (208 V., 8500 kW) (ER40/50) .....	2
12	00-416741-000G10	Element Assy. (220 V., 8500 kW) (ER40/50) .....	2
13	00-416741-000G11	Element Assy. (240 V., 8500 kW) (ER40/50) .....	2
14	00-416741-000G12	Element Assy. (480 V., 8500 kW) (ER40/50) .....	2
15	00-416741-000G13	Element Assy. (208 V., 10500 kW) (ER50) .....	2
16	00-416741-000G14	Element Assy. (220 V., 10500 kW) (ER50) .....	2
17	00-416741-000G15	Element Assy. (240 V., 10500 kW) (ER50) .....	2
18	00-416741-000G16	Element Assy. (480 V., 10500 kW) (ER50) .....	2
19	00-421892-000G1	Element Assy. (208 V., 12000 kW) (ER85) .....	2
20	00-421892-000G2	Element Assy. (220 V., 12000 kW) (ER85) .....	2
21	00-421892-000G3	Element Assy. (240 V., 12000 kW) (ER85) .....	2
22	00-421892-000G4	Element Assy. (480 V., 12000 kW) (ER85) .....	2
23	00-421911-000G1	Hanger – Basket (ER40/50) .....	2
	00-414146-00002	Thermostat Hi-Limit .....	1
	00-416736-00001	Gasket – Element Flange (ER225/40/50/85) .....	1
	00-414178-000G2	Clamp Assy. – Top Element .....	1
	00-414177-00001	Clamp – Bottom Element (October 2005 to Present) .....	1
	00-426801-00001	Wired Switch (Tilt Switch) .....	1
	00-426801-00002	Magnet Switch Element Head (Tilt Switch) .....	1
	00-411496-000F7	Tilt Switch (Prior to August 15, 2003) .....	1

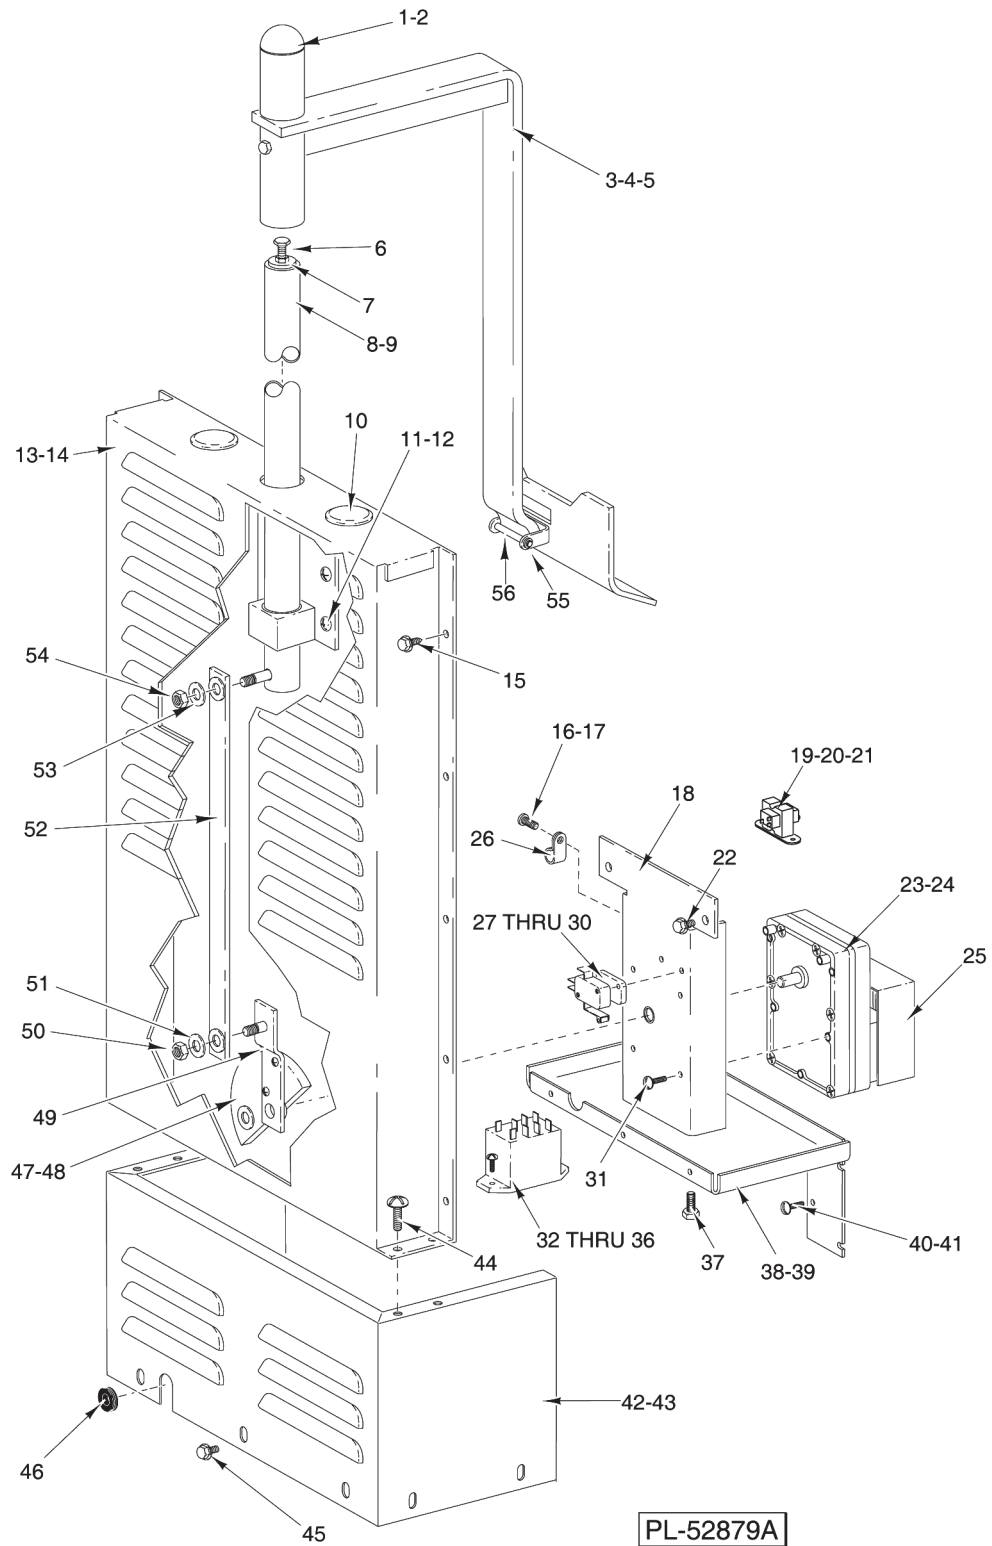

## BASKETLIFT COMPONENTS

## BASKETLIFT COMPONENTS

ILLUS.	PART NO.	NAME OF PART	AMT.
PL-52879A			
1	00-423374-00001	Cap – Rod End .....	1
2	SC-047-35	Set Screw $\frac{5}{16}$ -18 x $\frac{1}{2}$ Hdls., Cup Pt. ....	1
3	00-422495-000G1	Lift Assy. (Dual) (ER40/50, ER225) .....	1
4	00-422495-000G2	Lift Assy. (ER85) .....	1
5	00-422495-000G3	Lift Assy. (Single) (ER40/50) .....	1
6	00-418118-00001	Bolt – Adjusting .....	1
7	NS-018-01	Jam Nut $\frac{1}{4}$ -20 Hex .....	1
8	00-418479-000G2	Tube – Basketlift (ER40/50, ER85) .....	1
9	00-423262-000G1	Tube – Basketlift (ER40/50, ER85) .....	1
10	PB-004-04	Plug Button ( $1\frac{1}{4}$ ) .....	2
11	SD-032-07	Self-Tapping Screw 10-24 x $\frac{1}{2}$ Hex Washer Hd., Type TT .....	6
12	00-422247-000G1	Bearing Support Assy. ....	1
13	00-422017-00001	Wrap – Top (ER40/50) .....	1
14	00-422018-00001	Wrap – Top (ER85) .....	1
15	SD-036-03	Self-Tapping Screw 8-18 x $\frac{3}{8}$ Hex Washer Hd., Type AB .....	10
16	SC-109-10	Mach. Screw 6-32 x $\frac{3}{8}$ Pan Hd. ....	1
17	NS-009-07	Mach. Nut 6-32 Hex .....	1
18	00-418123-000G1	Plate – Motor .....	1
19	00-411500-00012	Transformer (120 VAC, 28 V., 20 VA) .....	AR
20	00-411500-00013	Transformer (200-240 VAC, 28 V., 20 VA) .....	AR
21	SD-032-07	Self-Tapping Screw 10-24 x $\frac{1}{2}$ Hex Washer Hd., Type TT .....	2
22	SD-037-80	Self-Tapping Screw 10-24 x $\frac{1}{2}$ Hex Washer Hd., Type TT .....	6
23	00-418156-00001	Gear Motor (115 V., 60 Hz.) .....	1
24	00-418156-00002	Gear Motor (208 V.) .....	1
25	00-418517-00001	Shroud – Motor .....	1
26	00-078752-00012	Clamp – Cable .....	1
27	00-418159-00001	Block – Cam Switch .....	1
28	00-411496-000F3	Switch – Micro .....	1
29	SC-112-90	Mach. Screw 4-40 x 1 Pan Hd. ....	2
30	NS-009-12	Mach. Nut 8-32 Hex .....	2
31	SC-018-47	Mach. Screw 10-32 x $\frac{3}{4}$ Pan Hd. ....	4
32	00-416535-00004	Relay S.P.D.T. 24 V. Coil (Located on rear of panel) .....	1
33	00-416535-00006	Switch – Relay (ERC Series) .....	AR
34	00-416535-00007	Switch – Relay (240 V.) (ERC Series) .....	AR
35	SC-109-10	Mach. Screw 6-32 x $\frac{3}{8}$ Pan Hd. ....	2
36	NS-009-07	Mach. Nut 6-32 Hex .....	2
37	SD-037-80	Self-Tapping Screw 10-24 x $\frac{1}{2}$ Hex Washer Hd., Type TT .....	2
38	00-422730-00001	Base – Motor Mounting (ER85) .....	1
39	00-422729-00001	Base – Motor Mounting (ER40/50) .....	1
40	SC-037-80	Cap Screw 10-24 x $\frac{1}{2}$ Hex Hd. ....	2
41	SD-032-07	Self-Tapping Screw 10-24 x $\frac{1}{2}$ Hex Washer Hd., Type TT .....	2
42	00-418480-00001	Wrap – Bottom .....	1
43	00-418510-00001	Wrap – Bottom .....	1
44	SD-036-03	Self-Tapping Screw 8-18 x $\frac{3}{8}$ Hex Washer Hd., Type AB .....	14
45	SC-037-80	Cap Screw 10-24 x $\frac{1}{2}$ Hex Hd. ....	2
46	00-418482-00001	Grommet .....	1
47	00-418475-000G1	Crank-Arm Assy. ....	1
48	SC-055-02	Set Screw $\frac{1}{4}$ -20 x $\frac{1}{4}$ Hdls., Cup Pt. ....	2
49	SD-015-41	Self-Tapping Screw 8-32 x $\frac{1}{2}$ Phil. Pan Hd., Taptite .....	2
50	NS-047-73	Lock Nut $\frac{5}{16}$ -18 Hex .....	1
51	WS-004-33	Washer .....	1
52	00-418477-000G2	Coupler Assy. ....	1
53	WS-004-33	Washer .....	1
54	NS-047-73	Lock Nut $\frac{5}{16}$ -18 Hex .....	1
55	00-418488-00001	Roll Pin .....	1
56	00-418487-00001	Roller .....	1

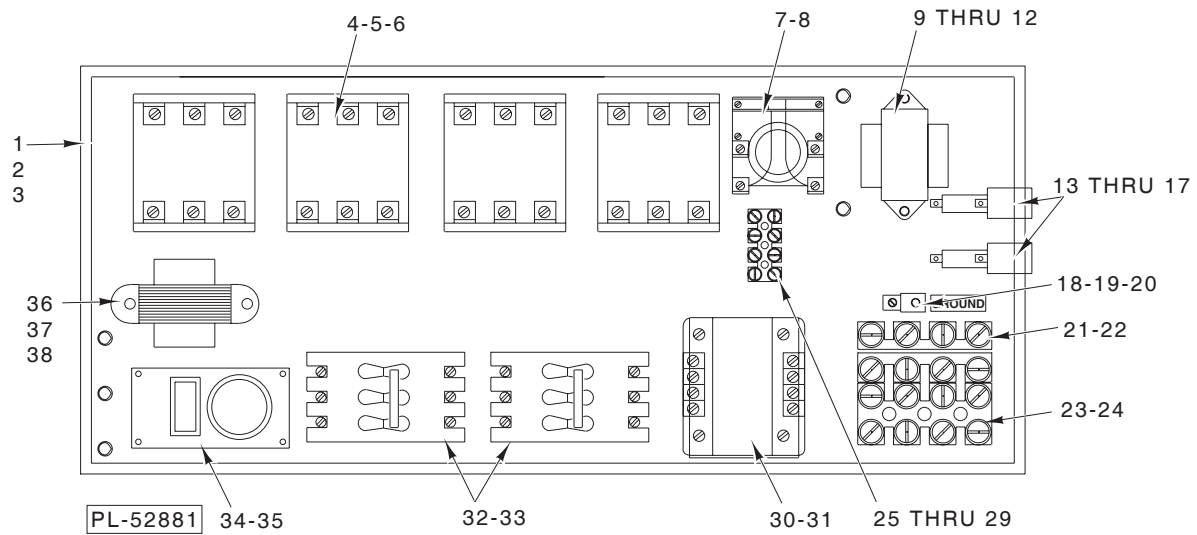

## POWER SUPPLY BOX

## POWER SUPPLY BOX

ILLUS. PL-52881	PART NO.	NAME OF PART	AMT.
1	00-421896-00001	Box – Power Supply (Prior to April 28, 2005) .....	1
	00-497095-00001	Box – Power Supply (April 28, 2005 to Present) (ER40/50) .....	1
	00-497095-00002	Box – Power Supply (October 6, 2005 to Present) (ER85) .....	1
2	00-421895-00001	Cover – Box (Prior to April 28, 2005) .....	1
3	SD-036-96	Self-Tapping Screw 8-18 x 3/4 Hex Hd., Type AB .....	2
4	00-411497-000C5	Contactactor (3 Pole, 40-amp, 230V) .....	4
5	00-411497-000C3	Contactactor (3 Pole, 40-amp, 120 V) .....	4
6	SD-036-96	Self-Tapping Screw 8-18 x 3/4 Hex Hd., Type AB .....	8
7	00-411497-000A3	Relay S.P.D.T., 24 V. ....	1
8	SD-036-96	Self-Tapping Screw 8-18 x 3/4 Hex Hd., Type AB .....	4
9	00-411500-00012	Transformer (120 VAC, 28 V., 20 VA) .....	1
10	00-411500-00013	Transformer (200-240 VAC, 28 V., 20 VA) .....	1
11	00-419572-000G2	Transformer 12 V. ....	1
12	SD-036-96	Self-Tapping Screw 8-18 x 3/4 Hex Hd., Type AB .....	2
13	FE-023-55	Holder – Fuse .....	AR
14	FE-019-40	Fuse (15 Amp.) (300 V.) .....	AR
15	SC-021-10	Mach. Screw 6-32 x 1/2 Rd. Hd. ....	AR
16	WL-004-40	Lockwasher #10 Medium .....	AR
17	NS-009-07	Mach. Nut 6-32 Hex .....	AR
18	00-417856-00001	Lug – Grounding (With Set Screw) .....	1
19	SD-032-07	Self-Tapping Screw 10-24 x 1/2 Hex Washer Hd., Type TT .....	1
20	WL-004-40	Lockwasher #10 Medium .....	1
21	00-410472-00009	Block – Terminal (208/240 V.) .....	1
22	SD-036-96	Self-Tapping Screw 8-18 x 3/4 Hex Hd., Type AB .....	2
23	00-410472-00008	Terminal Block .....	1
24	SD-036-96	Self-Tapping Screw 8-18 x 3/4 Hex Hd., Type AB .....	AR
25	00-414208-00001	Terminal Barrier .....	1
26	00-414208-00002	Barrier – Terminal .....	1
27	SC-119-90	Mach. Screw 6-32 x 1 Pan Hd. ....	2
28	NS-009-07	Mach. Nut 6-32 Hex .....	2
29	WL-004-40	Lockwasher #10 Medium .....	2
30	00-411500-00006	Transformer (480 V.) .....	1
31	SD-036-03	Self-Tapping Screw 8-18 x 3/8 Hex Washer Hd., Type AB .....	4
32	00-411501-00014	Circuit Breaker .....	2
33	SD-036-96	Self-Tapping Screw 8-18 x 3/4 Hex Hd., Type AB .....	4
34	00-419574-000G1	Power Supply Board Assy. (Prior to August 15, 2003) .....	1
35	NS-046-89	Nut Assy. 6-32 Hex KEPS .....	4
36	00-411500-00013	Transformer (200-240 VAC, 28 V., 20 VA) .....	1
37	SD-036-03	Self-Tapping Screw 8-18 x 3/8 Hex Washer Hd., Type AB .....	1
38	00-419572-000G1	Transformer 12 V. (RC3, 4 & 5) .....	2
	FE-002-45	Connector – Conduit 1/2 TS (2 Screws Included) .....	1
	00-422356-00001	Stand – Contactactor .....	2
	00-421363-00003	Cord – Power .....	1
	00-419319	Power Cord (Filter) .....	2
	00-416535-00004	Relay Switch (April 28, 2005 to Present) .....	1
	00-416535-00007	Relay Switch 240 V (April 28, 2005 to Present) .....	1
	00-427759-00001	Interface Board (Used w/TDI Controller) .....	1

## RECOMMENDED SPARE PARTS LIST

PART NO.	NAME OF PART	AMT.
00-414146-00002	Thermostat – High Limit .....	1
00-422737-00001	Thermistor Probe – Temperature .....	1
00-427759-00001	Interface Board .....	1
00-426805-000G1	Reed Switch – Wired .....	1
00-426801-00002	Magnet – Reed Switch .....	1
00-411500-00013	Transformer 240/24 40 VA .....	1
FE-023-55	Fuse Holder .....	1
FE-019-40	Fuse 15-amp .....	1
00-411501-00021	Circuit Breaker 50-amp .....	1
00-416535-00007	Relay, 240V .....	1
00-416535-00004	Relay, 24V .....	1
00-416535-00006	Relay, 120V .....	1
00-427755-000G1	Rocker Switch .....	1
00-411497-000C5	Contactactor 40-amp 230V .....	1
00-411497-000C3	Contactactor 40-amp 120V .....	1
00-421892-000G1	Element 208V 12kW .....	1
00-421892-000G3	Element 240V 12kW .....	1
00-416741-000G9	Element 208V 8.5kW .....	1
00-416741-000G11	Element 240V 8.5kW .....	1
00-416741-000G5	Element 208V 7kW .....	1
00-416741-000G7	Element 240V 7kW .....	1
00-421892-000G4	Element 480V 12kW .....	1
00-416741-000G12	Element 480V 8.5kW .....	1
00-416741-000G8	Element 480V 7kW .....	1
00-411500-00012	Transformer 120/28 40 VA .....	1
00-411500-00013	Transformer 208-240/28 40 VA .....	1
00-427757-00001	Controller TDI D Series .....	1
00-427758-00001	Controller TDI C Series .....	1
00-497421-00001	Overlay, Controller TDI D Series .....	1
00-497422-00001	Overlay, Controller TDI C Series .....	1